

Clear PVC with Durable Schedule 40 PVC Fittings

Simple and Quick to Install


Variety of Models to Fit Many Different Applications

Trap Assembly Instructions

1. Screw Adapter (G) into 3/4" primary drain outlet.
2. Assemble components without glue to ensure fit. Mark as needed. Rotate clear U trap (B) and Cleanout Tee (C) to correct angle for installation.
3. Glue components (A through D, E, I, and J) into place. Glue Assembly into Adapter (G).
4. Glue drain line (K) into center portion of Cleanout Tee (C). The drain line must exit with at least a 5 degree downward angle.
5. Attach label to unit.
6. Attach Black Caps (F) to Cross (E) to close off unused outlets.
7. Wire the CS-1 Condensate Safety Overflow Switch per separate instructions and diagram. Can be connected with either Red or Yellow wires.

Drain Trap Kit Product Guide

Catalog No.	Trap Type	Cleaning Brush	Float Switch
DTK113	1" DROP	NO	NO
DTK113B	1" DROP	YES	NO
DTK205	3" DROP	YES	YES
DTK207 with Cross	1" DROP	YES	YES
DTK210	1" DROP	YES	YES
DTK626	1" DROP	YES	YES

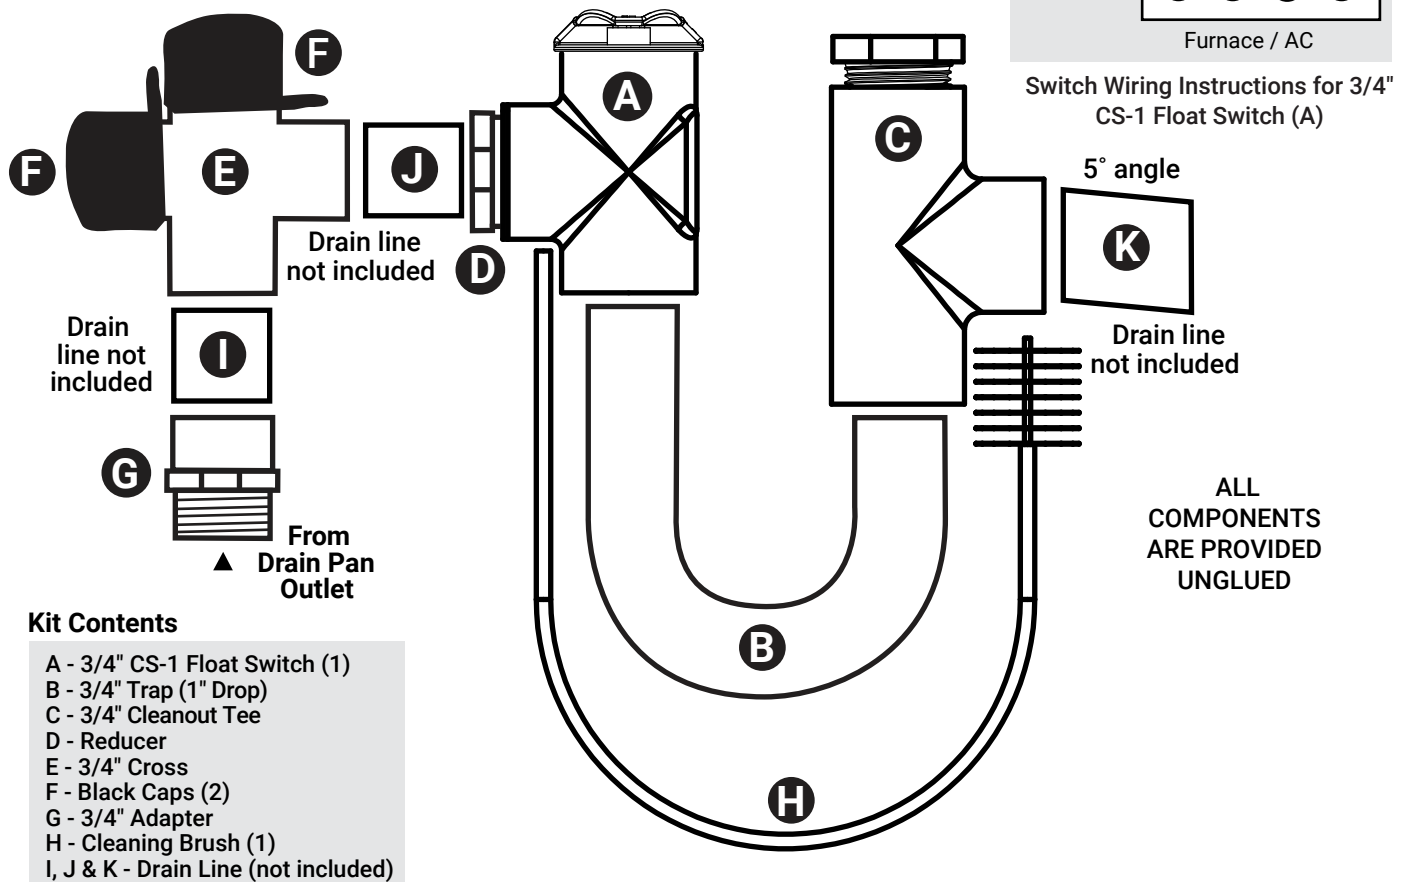

- Kit Contents**
- A - 3/4" CS-1 Float Switch (1)
 - B - 3/4" Trap (1" Drop)
 - C - 3/4" Cleanout Tee
 - D - Reducer
 - E - 3/4" Cross
 - F - Black Caps (2)
 - G - 3/4" Adapter
 - H - Cleaning Brush (1)
 - I, J & K - Drain Line (not included)